

HEIDENHAIN



Product Information

LIC 4113V **LIC 4193V**

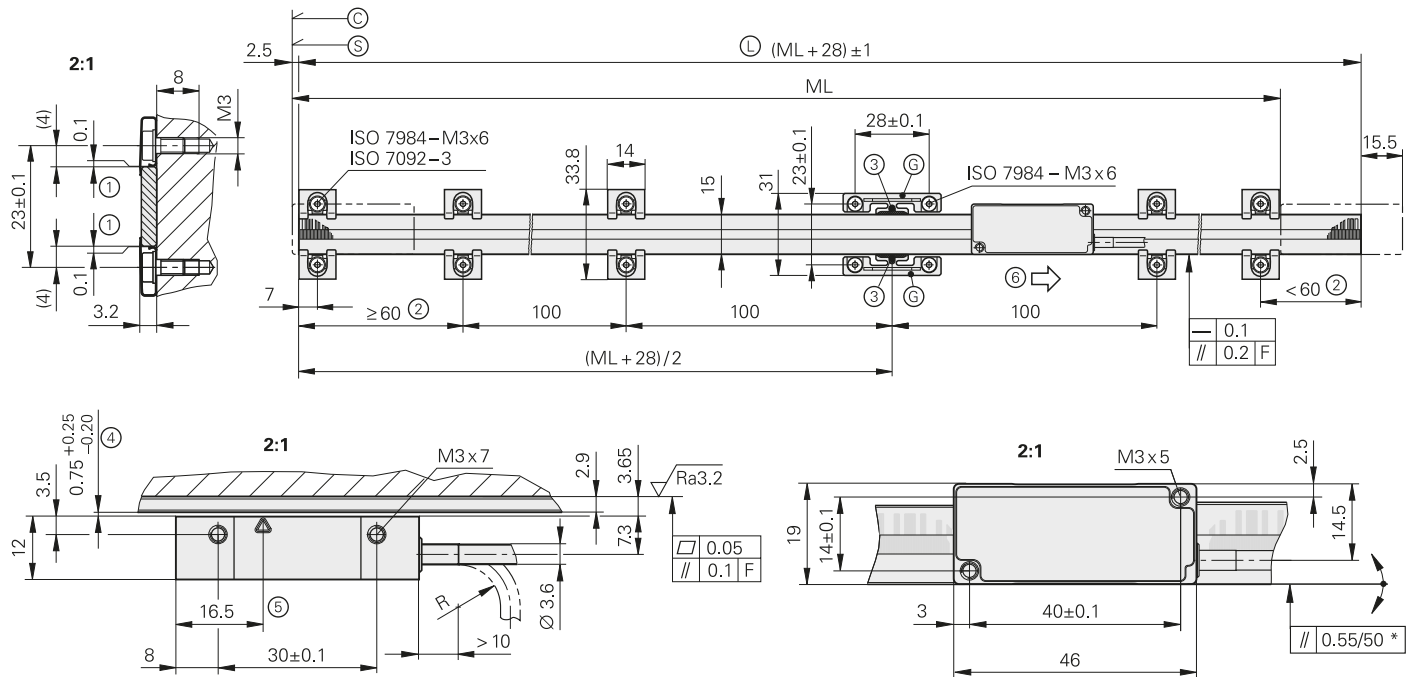
Exposed Linear Encoders
for High Vacuum

July 2017

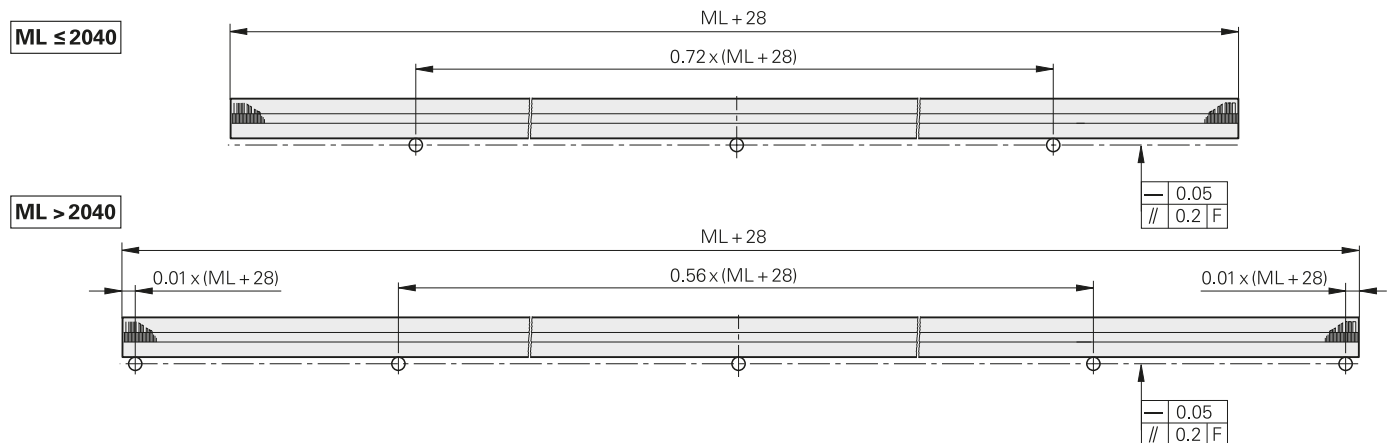
LIC 4113V, LIC 4193V

Absolute linear encoder for high vacuum

- Measuring lengths up to 3 m
- Measuring steps to 0.001 μm
- Measuring standard of glass or glass ceramic
- Measuring standard is fastened by fixing clamps

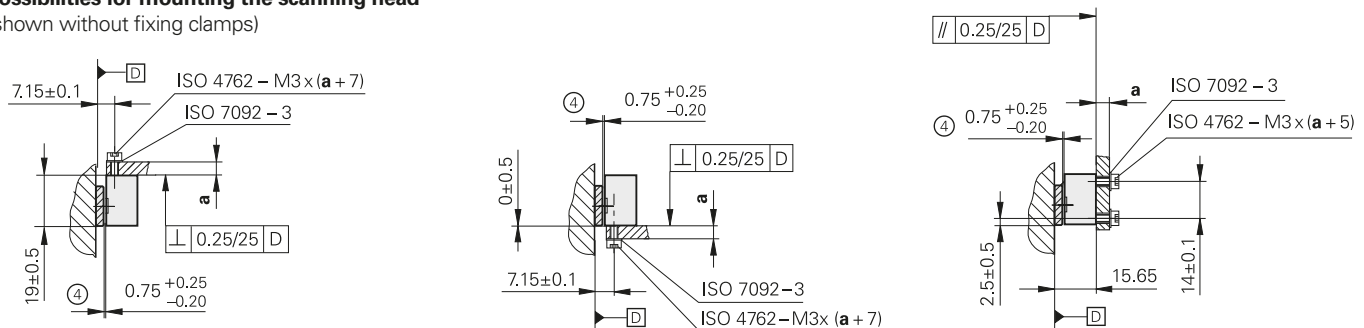


Position of the stop pins



Possibilities for mounting the scanning head

(shown without fixing clamps)



mm
Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ±0.2 mm

- F = Machine guideway
- * = Mounting error plus dynamic guideway error
- ⑤ = Beginning of measuring length ML
- ⑥ = Code start value: 100 ± 1 mm
- ⑦ = Scale length
- ⑧ = Fixed-point element for defining the thermal fixed point
- ⑨ = Gap is set with a spacer foil during assembly
- ⑩ = Use additional fixing clamp pairs depending on the measuring length (ML)
- ⑪ = Adhesive
- ⑫ = Mounting clearance between scanning head and scale
- ⑬ = Optical centerline
- ⑭ = Direction of scanning unit motion for output signals in accordance with interface description



Scale	LIC 4003
Measuring standard Coefficient of linear expansion*	METALLUR scale grating on glass ceramic or glass $\alpha_{\text{therm}} \approx 8 \cdot 10^{-6} \text{ K}^{-1}$ (glass) $\alpha_{\text{therm}} = (0 \pm 0.5) \cdot 10^{-6} \text{ K}^{-1}$ (Robax glass ceramic)
Accuracy grade*	$\pm 1 \mu\text{m}$ (only for Robax glass ceramic), $\pm 3 \mu\text{m}$, $\pm 5 \mu\text{m}$
Baseline error	$\leq \pm 0.275 \mu\text{m}/10 \text{ mm}$
Measuring length ML* in mm	240 340 440 640 840 1040 1240 1440 1640 1840 2040 2240 2440 2640 2840 3040 (Robax glass ceramic up to max. ML 1640)
Mass	3 g + 0.1 g/mm Measuring length

Scanning head		AK LIC 411 V	AK LIC 419FV	AK LIC 419MV		AK LIC 419PV
Interface		EnDat 2.2	Fanuc Serial Interface αi Interface	Mitsubishi High Speed Interface		Panasonic Serial Interface
Ordering designation*		EnDat22	Fanuc05	Mit03-4	Mit02-2	Pana01
Measuring step*		0.01 μm (10 nm) 0.005 μm (5 nm) 0.001 μm (1 nm)		0.01 μm (10 nm) 0.005 μm (5 nm)		
Calculation time t _{cal} Clock frequency		≤ 5 μs 16 MHz	—			
Traversing speed ¹⁾		≤ 600 m/min				
Interpolation error		±20 nm				
Electrical connection		Cable 1 m or 3 m with D-sub connector (male) 15-pin				
Cable length (with HEIDENHAIN cable)		≤ 100 m	≤ 50 m	≤ 30 m		≤ 50 m
Voltage supply		3.6 V DC to 14 V DC				
Power consumption ¹⁾ (max.)		At 3.6 V: ≤ 700 mW At 14 V: ≤ 800 mW	At 3.6 V: ≤ 850 mW At 14 V: ≤ 950 mW			
Current consumption (typical)		At 5 V: 75 mA (without load)	At 5 V: 95 mA (without load)			
Vibration 55 Hz to 2000 Hz Shock 6 ms		≤ 500 m/s ² (EN 60068-2-6) ≤ 1000 m/s ² (EN 60068-2-27)				
Operating temperature		−10 °C to 50 °C				
Baking temperature		100 °C				
Vacuum class		High vacuum up to 10 ^{−7} mbar				
Protection EN 60529		IP40				
Mass	Scanning head Connecting cable Connector	18 g (without cable) 21 g/m D-sub connector: 64 g				

* Please select when ordering

¹⁾ See *General electrical information* in the brochure *Interfaces of HEIDENHAIN Encoders*

Robax is a registered trademark of Schott-Glaswerke in Mainz, Germany

Encoders for use in vacuum

The vacuum-compatible encoders are distinguished by the following features:

- Air vents
- Production in a clean room
- Specialized cleaning and packaging
- Cable with PTFE insulation and tin-plated copper braiding

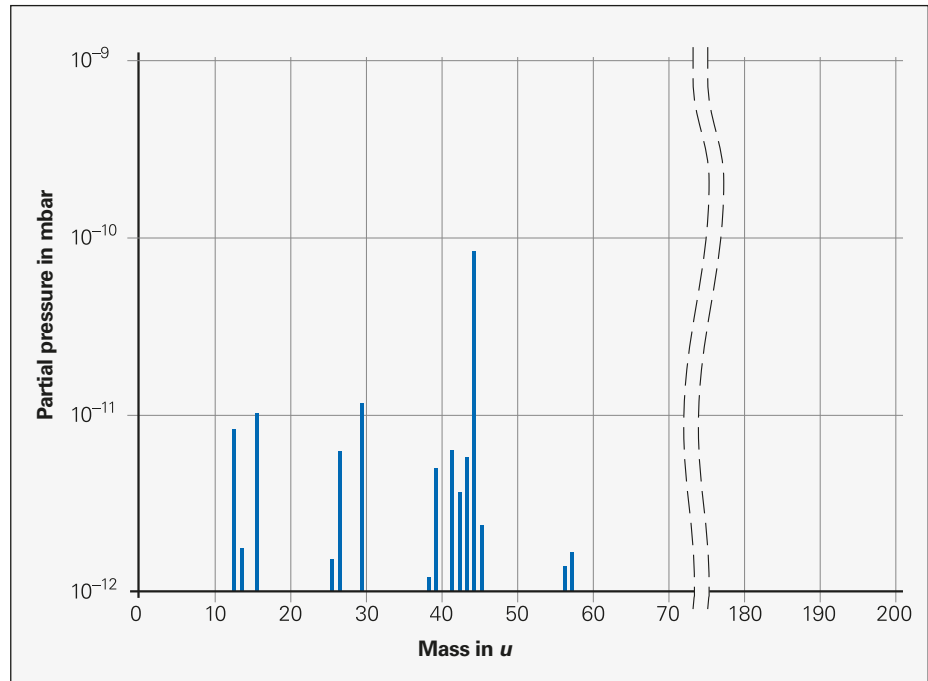
Residual gas analysis

The influence of encoders on the quality of the vacuum can be determined through residual gas analyses. In such an analysis, a sample in a vacuum chamber is pumped out at least to 10^{-6} mbar (turbomolecular pump, pumping speed 15 l/s to 200 l/s) whereby the residual gases are measured with a mass spectrometer (Pfeiffer QMA 200) and an absolute pressure sensor (VACOM ATMION). If the typical residual gases of the empty chamber are then subtracted, the outgassing behavior of the examined sample can be deduced.

The amount of remaining residual gases depends not only on the cleanliness of the sample and the materials tested, but also on the pump type used and its pumping speed. The more pumping speed is used for the measurement and the longer the gas is pumped out, the lower is the quantity of residual gases.

To attain the lowest possible outgassing values, HEIDENHAIN recommends heating at 100 °C for 48 hours under high vacuum conditions.



The figure shows the spectrum of the residual gas analysis of an AK LIC 411V scanning head with 1 m cable and D-sub connector. The scanning head was baked in a high vacuum at 100 °C for 48 hours. Hardly measurable or representable outgassing was determined for the scale (with fixed point bonding)





Residual gas analysis of an AK LIC 411 V scanning head with 1 m cable (with pumping speed of 107 l/s, pressure $6 \cdot 10^{-8}$ mbar)

Electrical connection



Pin layout for EnDat

15-pin D-sub connector								
								
	Voltage supply				Absolute position values			
	5	12	7	14	4	11	1	9
	U _P	Sensor U _P	0 V	Sensor 0 V	DATA	DATA	CLOCK	CLOCK
	Brown/Green	Blue	White/Green	White	Gray	Pink	Violet	Yellow

Pin layout for Fanuc

15-pinD-sub connector								
								
	Power supply				Absolute position values			
	5	12	7	14	4	11	1	9
	U _P	Sensor U _P	0V	Sensor 0V	Serial Data	Serial Data	Request	Request
	Brown/Green	Blue	White/Green	White	Gray	Pink	Violet	Yellow

Mitsubishi pin layout

15-pin D-sub connector								
								
	Voltage supply				Absolute position values			
	5	12	7	14	4	11	1	9
	U _P	Sensor U _P	0V	Sensor 0V	Serial Data	Serial Data	Request Frame	Request Frame
	Brown/Green	Blue	White/Green	White	Gray	Pink	Violet	Yellow

Cable shield connected to housing; **U_P** = Power supply voltage

Sensor: The sensor line is connected in the encoder with the corresponding power line

Vacant pins or wires must not be used.

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 32-5061

E-mail: info@heidenhain.de

www.heidenhain.de

This Product Information supersedes all previous editions, which thereby become invalid. The basis for ordering from HEIDENHAIN is always the Product Information document edition valid when the order is made.



For more information:

Comply with the requirements described in the following documents to ensure the correct operation of the encoder:

- Brochure: *Exposed Linear Encoders* 208960-xx
- Brochure: *Interfaces of HEIDENHAIN Encoders* 1078628-xx
- Technical Information *Linear Encoders for Vacuum Technology* 627568-xx